

Preliminary Version of a Two-Dimensional Technical Specification for SoftWalls

J. Adam Cataldo, Edward A. Lee, and Xiaojun Liu
{acataldo, eal, liuxj}@eecs.berkeley.edu
Electrical Engineering & Computer Science
University of California, Berkeley

17 April 2002

1 Introduction

The terrorist attacks of September 11, 2001 proved that airplanes make deadly weapons. In response to this attack-by-aircraft threat, Edward Lee proposed *SoftWalls*, a flight control system that prevents aircrafts from entering *no-fly zones* [Lee 2001]. These are restricted airspaces, such as those near major cities, government centers, military installations, chemical factories, and nuclear-power plants. The major objective of this control scheme is to minimize the control imposed on pilots while protecting the no-fly zones. This control scheme uses a map from the aircraft database together with position, velocity, and orientation information from onboard sensors to prevent no-fly zone entry.

This document describes our first approach at a SoftWalls control algorithm. We assume the aircraft travels in a horizontal plane at a constant velocity and can only turn. In this first approach, the no-fly zone is bounded by a line in the horizontal plane. While these approximations are unrealistic, we chose a simple model, which we will later refine for accuracy.

2 Two-Dimensional Model

2.1 Two-Dimensional Aircraft Model

In our two-dimensional model we only control the aircraft heading. Let the aircraft position be a function

$$p: \text{Reals} \rightarrow \text{Reals} \times \text{Reals}$$

where the domain is time (the reals) and the range is the two-dimensional aircraft position. Let \dot{p} denote the time derivative (the velocity) and \ddot{p} the second derivative with respect to time (the acceleration). Let p_x denote the x -direction position (east-west, increasing to the east) and p_y the y -direction position (north-south, increasing to the north). Similarly, \dot{p}_x and \ddot{p}_x denote the x -direction speed and acceleration.

Let the aircraft speed s be given by

$$\forall t \in \mathbf{Reals}, \quad s(t) = |\dot{p}(t)|.$$

Let

$$\theta: \mathbf{Reals} \rightarrow [-\pi, \pi)$$

be the aircraft heading, where 0 is due east, so that

$$\forall t \in \mathbf{Reals}, \quad \dot{p}(t) = (s(t) \cos(\theta(t)), s(t) \sin(\theta(t))).$$

Assume that during flight, the pilot controls the rate of change of heading, $\dot{\theta}$, with differential thrust and movement of the rudder, ailerons, and elevator. Moreover, the pilot controls the speed via overall thrust and vertical movement. In this model, which we show in figure 1, the the aircraft-model inputs are $\dot{\theta}$ and s .

2.2 Turn Radius

Assume the speed is a constant s , with s given in meters per second, so the pilot controls only heading. If the rate of change of heading is a constant, $\dot{\theta} = \alpha$, with α given in radians/second, it takes $\tau = 2\pi/\alpha$ seconds to complete one circle. Upon completing the circle, the aircraft has covered a $s\tau = 2\pi s/\alpha$ meter distance. Since the circle radius times 2π gives its circumference, the turning radius is

$$r = s/\dot{\theta}.$$

Thus, the rate of change of heading is

$$\dot{\theta} = s/r.$$

If we know the minimum-safe-turning radius is r_{min} , then the control signal $\dot{\theta}$ must be kept in the range $[-s/r_{min}, s/r_{min}]$.

For example, an aircraft traveling at

$$s = 500 \text{ kilometers/hour}$$

(139 meters/second) with a minimum safe turning radius $r_{min} = 1000$ meters constrains the pilot's safe $\dot{\theta}$ to the range $[-0.139, 0.139]$ radians per second.

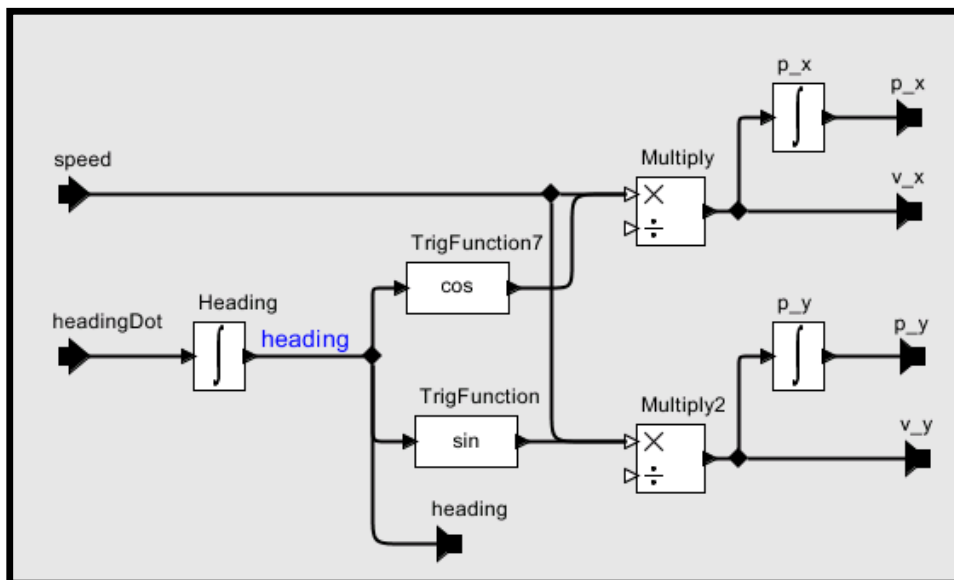


Figure 1: Two dimensional aircraft model.

2.3 Blending Controller

Let the pilot's control signal be $\dot{\theta}_p$ and the SoftWalls-generated control signal be $\dot{\theta}_s$. We take the rate of change of aircraft heading to be

$$\dot{\theta} = \text{limit}_{[-s/r_{min}, s/r_{min}]}(\dot{\theta}_p - \dot{\theta}_s),$$

where $\text{limit}_{[a,b]}$ is a function

$$\text{limit}_{[a,b]}: \text{Reals} \rightarrow [a, b]$$

where

$$\forall u \in \text{Reals}, \quad \text{limit}_{[a,b]}(u) = \begin{cases} b & \text{if } u > b, \\ a & \text{if } u < a, \\ u & \text{otherwise.} \end{cases}$$

This strategy blends the SoftWalls and pilot control signals ensuring that as long as the control parameter is within safe limits, the aircraft response to the pilot's control signal remains unattenuated.

2.4 Maintaining Responsiveness

Figure 2 illustrates the blending controller maintaining responsiveness while biasing the pilot control. When the SoftWalls controller adds no bias, the aircraft will turn as the pilot intends. That is, the actual $\dot{\theta}$ equals the pilot's $\dot{\theta}_p$. Suppose the SoftWalls bias is $-M = -s/r_{min}$, where M is the maximum rate of change in heading. The bias is rightward, and the pilot will be unable to turn the aircraft left. If the pilot attempts to turn left at the maximum rate M , the aircraft will keep straight. When the bias increases to $-3M/2$, also rightward, the aircraft will turn right at a rate greater than or equal to $-M/2$ for any pilot control signal.

With this scheme, a cooperative pilot will turn away from the soft wall to reduce the bias. An uncooperative pilot, however, will attempt a turn towards the wall even with the bias applied. When the bias exceeds $-M$, this pilot will be unable to overcome the bias, and with the controls saturated, the aircraft will turn away from the soft wall.

Until the actual $\dot{\theta}$ saturates, the aircraft responds exactly as the pilot expects. That is, when the slope of the response curve (figure 2) is not zero, it is one.

3 Criticality-Based Control

To assess the threat an aircraft poses to a no-fly zone, we created a criticality measurement. From this we compute the bias, θ_s , if any.

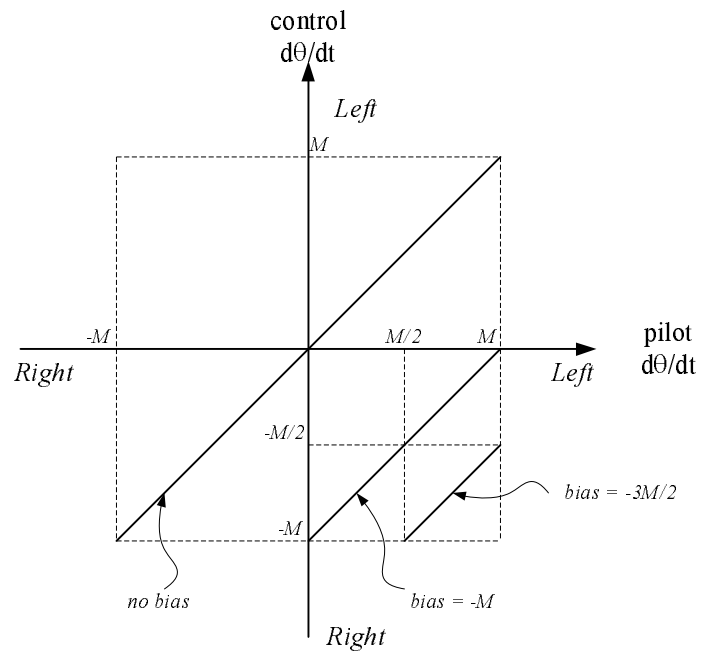


Figure 2: Actual rate of change of heading vs. pilot-specified rate of change of heading. Here, a left turn is on the right side of the graph because a positive $d\theta/dt$ will cause the aircraft to turn left. Note that M is the maximum-safe $d\theta/dt$.

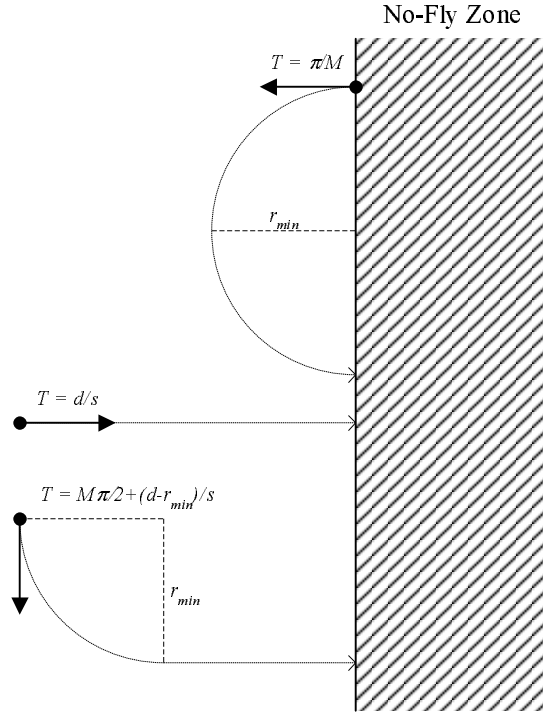


Figure 3: Calculating $T(x, \theta)$ for criticality measure.

3.1 A Measure of Criticality

Our criticality measurement is inversely proportional to the minimum time it takes the aircraft to enter the no-fly zone. Figure 3 illustrates this measure. In this figure, the black dots represent the aircraft position, and the arrows represent its heading. For each position and heading, we plot the worst-case trajectory, i.e., the path that takes the aircraft into the no-fly zone faster than all other paths, as dotted lines. In this sense, we are calculating an optimal path for the aircraft to collide with the no-fly zone.

Suppose we define the no-fly zone as the region $\{(x, y) \mid x \geq b_x\}$. Then the criticality measurement, c , and the aircraft y -position are independent. We let $c(x, \theta) = 1/T(x, \theta)$ where $T(x, \theta)$, the minimum time a aircraft needs to contact

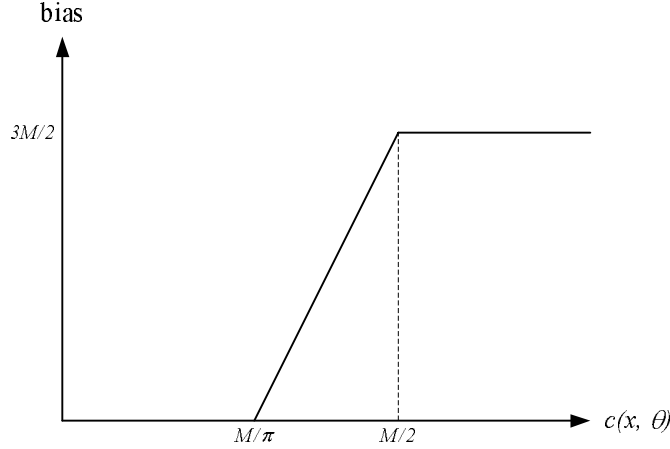


Figure 4: Bias as a function of criticality.

the no-fly zone. Here

$$T(x, \theta) = \begin{cases} \frac{\theta}{M} + \frac{d - r_{min} \sin \theta}{s} & \text{if } d \geq r_{min} \sin \theta, 0 \leq \theta \leq \pi/2 \\ \frac{\theta - \arcsin\left(\frac{r_{min} \sin \theta - d}{r_{min}}\right)}{M} & \text{if } d < r_{min} \sin \theta, 0 \leq \theta \leq \pi/2 \\ \frac{2(\theta - \pi/2)}{M} + T(x, \pi - \theta) & \text{if } \pi/2 < \theta \leq \pi \\ T(x, |\theta|) & \text{if } -\pi \leq \theta < 0 \end{cases} \quad (1)$$

where $d = b_x - x$ is the distance between the aircraft and the no-fly zone. Note that s , r_{min} , and M are related by $M = s/r_{min}$.

Note also that if the aircraft is at the wall and heading directly away from it, as in the top diagram of figure 3, then the minimum time for aircraft/no-fly zone collision is the time required to traverse a semi-circle with radius r_{min} . This is π/M . If the aircraft is at distance d from the wall and heading straight towards it, then the minimum time is d/s , where s is the (constant) speed. If the aircraft is at distance d from the wall (greater than r_{min}) but heading parallel to it, then the time it will take to reach the wall is

$$T = \pi M/2 + (d - r_{min})/s.$$

3.2 Criticality-Based SoftWall Controller

Our criticality-based controller produces the bias shown in figure 4. The threshold M/π is the value of $c(x, \theta)$ when $x = b_x$ (the aircraft is on the boundary of the

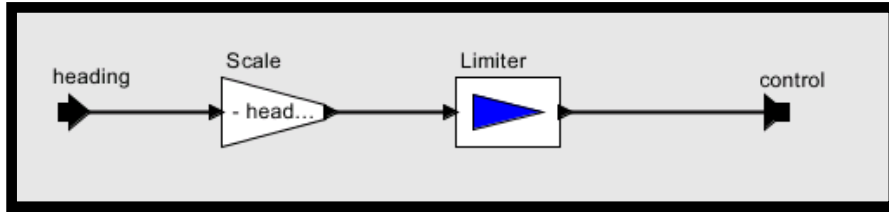


Figure 6: Maximally uncooperative pilot model. The scale factor is large to make a sharp transition. See figure 7.

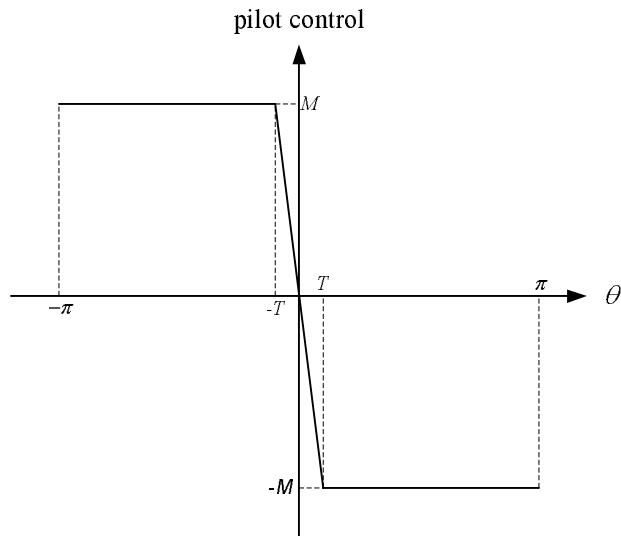


Figure 7: Pilot control as a function of heading for the maximally uncooperative pilot.

$[-M, M]$ before fed back to the aircraft model.

Figure 8 shows a simulation run. In our simulation the aircraft initially flies parallel to the no-fly zone ($\theta = \pi/2$), at a distance of 2 miles. The aircraft speed is a constant 360 miles per hour. The maximum turning rate is $2\pi/20$, so that the aircraft can complete a circle in 20 seconds. (Note that these numbers are fictional. Later simulations will use real aircraft-performance characteristics.)

The aircraft starts at the lower left, traveling parallel to the no-fly zone, which is two miles right of the aircraft. Initially, the malicious pilot freely turns the aircraft toward the no-fly zone. When the aircraft is within 1 mile from the zone, the controller starts biasing the pilot control. Before the bias control reaches M , the pilot mitigates the bias and keeps the aircraft heading toward the no-fly zone. The pilot control finally saturates when $\theta_s = M$, and the SoftWall controller turns the aircraft around at half the maximum rate. As the criticality decreases, the bias from the controller becomes smaller. The pilot regains steerage towards the no-fly zone, but the aircraft settles in, flying parallel to the zone. At this time, the pilot is still trying in vain to fly the aircraft into the no-fly zone by placing the control maximally right.

We are still improving this criticality-based control scheme. At present, we are simulating a variety of flight scenarios, and investigating interactive simulations where experimenters control the pilot's output.

3.4 Criticality-Based Control Verification

3.4.1 Validity of the Criticality Measure

The trajectories we use to calculate $T(x, \theta)$ are illustrated in figure 3. Such trajectories are achieved by first turning the aircraft at the maximum rate, M , towards the no-fly zone. The aircraft then maintains that direction until hitting the no-fly zone. In the following we argue that such trajectories indeed yield the shortest time to reach the no-fly zone.

Let $\dot{x}(t)$ denote the aircraft velocity in the direction perpendicular to the wall, and let $\theta(t)$ denote the aircraft heading. From our aircraft model, where s is the constant aircraft speed,

$$\dot{x}(t) = s \cos \left(\int_0^t \dot{\theta}(\hat{t}) d\hat{t} \right)$$

Here $\dot{\theta}(t)$ is the rate of change of heading. When the SoftWalls system applies no bias, this signal equals the pilot input. θ is always in the range $[-s/r_{min}, s/r_{min}]$.

When $x(t) < b_x$, i.e., the aircraft is left of the no-fly zone, the aircraft approaches the no-fly zone faster as $\dot{x}(t)$ increases. The maximum value of $\dot{x}(t)$ is s . If $\theta(t) = 0$, then $\dot{x}(t) = s$, so an input of $\dot{\theta}(t) = 0$ will cause the aircraft to move

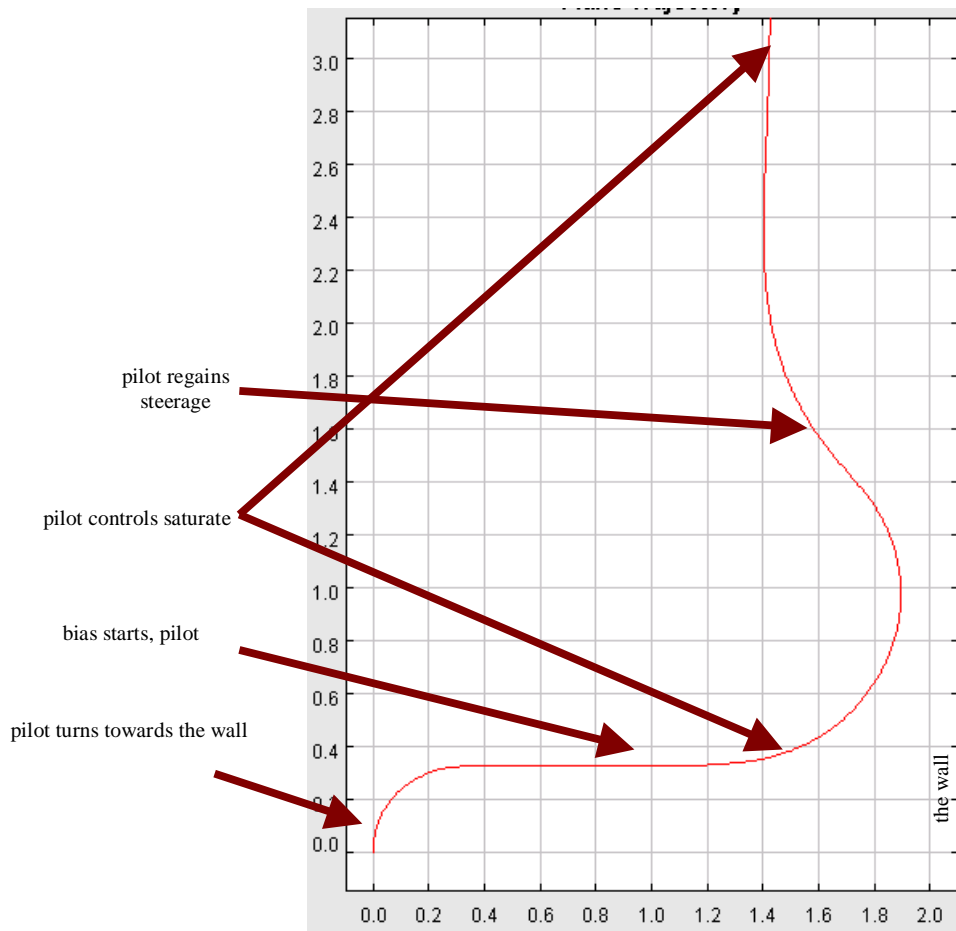


Figure 8: Simulation run with a maximally uncooperative pilot.

to the wall the fastest. When $\theta(t) \neq 0$, as $\theta(t) \rightarrow 0$, $\dot{x}(t) \rightarrow s$. For $\theta(t) \in (0, \pi]$, the fastest way to make $x(t) \rightarrow s$ is to set $\dot{\theta}(t) = -M$, where M is the maximum turning rate. In this range of angles, $\dot{x}(t)$ will be strictly increasing at the maximum rate, so this is the fastest approach to the wall. Similarly, when $\theta(t) \in (-\pi, 0)$, the fastest approach to the wall uses $\dot{\theta}(t) = M$ until $\theta(t) = 0$. The criticality measure uses this strategy to calculate the minimum time for aircraft/no-fly zone collision, so it is a valid minimum-time calculation.

3.4.2 Safety of Criticality-Based Control

We assume that the initial position of the aircraft is at least $2r_{min}$ from the no-fly zone. With the criticality-based control strategy discussed earlier in this section, we show that the aircraft cannot enter the no-fly zone, even if the pilot tries to.

At the initial position, the criticality $c \leq M/2$. Because c is a continuous function of x and θ , along any potential trajectory from the initial position to the no-fly zone, there must be a point where $c(x, \theta) = M/2$. The pair x, θ satisfying this equation is related by

$$x = \begin{cases} b_x - r_{min}(2 + \sin|\theta| - |\theta|) & |\theta| \leq 2 \\ b_x - r_{min}(\sin|\theta| - \sin(|\theta| - 2)) & 2 < |\theta| \leq \pi/2 + 1 \end{cases}$$

$c(x, \theta)$ is always less than $M/2$ when $|\theta| > \pi/2 + 1$.

If a malicious pilot wants to fly the aircraft from a point where $c(x, \theta) = M/2$ into the no-fly zone, the pilot has to prevent the criticality from decreasing to a value less than $M/2$. Given the bias added by our control strategy, the aircraft will be turned away from the no-fly zone at a minimum rate of $M/2$ when $c(x, \theta) \geq M/2$. Starting at a point where $c(x, \theta) = M/2$, the maximum x -coordinate that the aircraft can reach is given by

$$x_{max} = \begin{cases} b_x - r_{min}(3 \sin|\theta| - |\theta|) & |\theta| \leq \pi/2 \\ b_x - r_{min}(2 + \sin|\theta| - |\theta|) & \pi/2 < |\theta| \leq 2 \\ b_x - r_{min}(\sin|\theta| - \sin(|\theta| - 2)) & 2 < |\theta| \leq \pi/2 + 1 \end{cases}$$

x_{max} is never greater than b_x , so the aircraft is never inside the no-fly zone.

4 Summary

We have described a simple control algorithm to keep an aircraft out of a no-fly zone. Our test zone is bounded by a straight line in two dimensions. Our strategy maintains maximal responsiveness to pilot controls subject to the constraint that we forbid no-fly zone entry.

References

- [Lee 2001] Edward A. Lee. “Soft Walls - Modifying Flight Control Systems to Limit the Flight Space of Commercial Aircraft”. *Technical Memorandum UCB/ERL M01/31*. 15 September 2001.